

Dolphin[®] Net Base

Four-Slot Communication Cradle for the
Dolphin[®] 7900 Mobile Computer
Dolphin[®] 9500 Mobile Computer
Dolphin[®] 9900 Mobile Computer

Quick Start Guide

Dolphin Net Base Quick Start Guide

Introduction

The Net Base enables up to four mobile computers to communicate with a host device over an Ethernet network.



We recommend use of Hand Held Products peripherals, power cables, and power adapters. Use of any non-Hand Held Products peripherals, cables, or power adapters may cause damage not covered by the warranty.

Unpacking the Net Base

Open the shipping box and inspect the package to see that the following standard items are included:

- One Dolphin Net Base Ethernet cradle
- One universal AC/DC power adapter for the Dolphin Net Base
- One power cord
- One serial extension cable

These are the items you need to set up, configure, and operate the Net Base. If any items are missing or anything appears to be damaged, contact your Customer Account Representative.

Keep the original packaging in case you need to return the Net Base for service or store the Net Base while not in use.

Software Requirements


Before you connect the Dolphin terminal to the Net Base, make sure you have the most current software installed. To check this, go to **Start > Power Tools > SysInfo**.

Applications on the Dolphin Terminal

Applications running on the Dolphin terminal when it is connected to the Net Base should be designed specifically for a partially connected network. For more details, please refer to the Best Practices for Partially Connected Networks document available at www.honeywell.com/aidc.

Hardware Overview

Front Panel

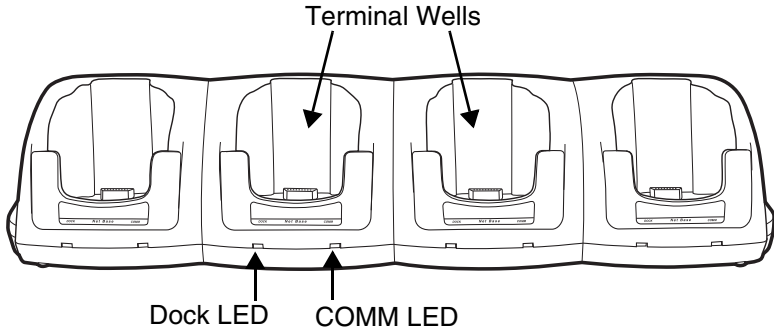


Dock LED Lights solid green when the terminal is properly seated. The terminal can communicate with the Net Base only when properly seated in the well.

COMM LED Indicates the status of data transfer between the Dolphin terminal and the Net Base.

Solid Green: Indicates a USB connection.

Flashing Orange: Indicates that data is being transferred.


Back Panel

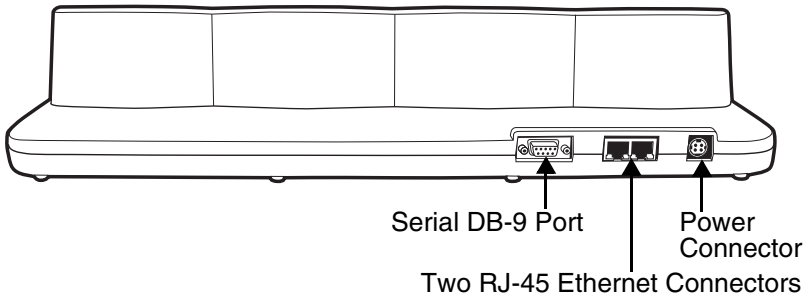

Bottom Panel

For details about the bottom panel, see [Mounting Options](#), page 1-10.

Power Supply

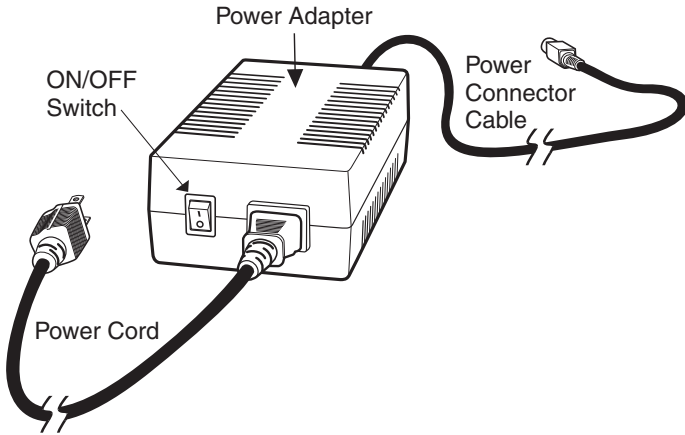

Setting up the Net Base

1. Make sure the ON/OFF switch on the power adapter is in the OFF position.
2. Plug the power cord into the power adapter.
3. Plug the power connector cable into the power connector on the back of the Net Base.
4. Plug the power cord into a standard wall outlet.
5. Plug the CAT-5 Ethernet cable into either of the RJ-45 connectors on the back of the Net Base.
6. Plug the Ethernet cable into the network.
7. On the power adapter, turn the ON/OFF switch to the ON position.
8. The COMM LEDs on all four slots flash binary codes as the Net Base finds the DHCP server during the bootloader and kernel sequences.

Charging



We recommend use of Hand Held Products Li-Ion battery packs. Use of any non-Hand Held Products battery may result in damage not covered by the warranty.


The Net Base provides power to the Dolphin terminal to allow the Dolphin terminal to charge the main battery of the terminal. The intelligent battery charging system incorporated into all Dolphin terminals prevents overcharging, which means that Dolphin terminals may be stored in the Net Base indefinitely without damage to the terminals, battery packs, or the Net Base.

1. Install the Li-ion battery pack into the back panel of the terminal.
2. Slide the Dolphin terminal into one of the terminal wells until the Dock LED lights solid green. Charging by the Dolphin terminal begins immediately if required by the Dolphin terminal.

Connecting the Dolphin Terminal to the Net Base

After the Net Base is installed, configured, and connected to the host computer, you must connect the Dolphin terminal to the Net Base.

1. Insert a Dolphin terminal into a terminal well.

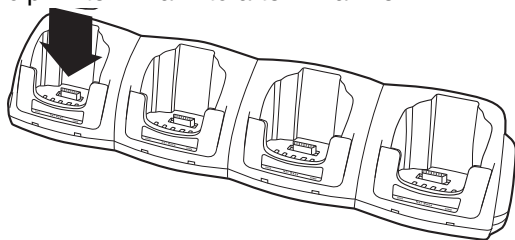

2. On the Dolphin terminal, tap **Start > Power Tools > RASMan**. The RASMan utility initializes.
3. When the connection is established between the Dolphin terminal and the Net Base, the terminal plays a sound and the communication icon appears in the Navigation bar.
4. Upon connection, the Dolphin terminal is assigned an IP address from the Net Base, which can be used by any application on the Dolphin terminal.
5. When you exit RASMan or remove the terminal from the Net Base, the terminal plays a sound and the disconnected icon appears in the Navigation bar.

Configuring the Network

By default, the Net Base is configured to obtain IP addresses automatically via DHCP server. This means that in most cases you would simply “plug and play” the unit. If necessary, you can use the configuration utility for dynamic network configuration.

If Your DNS Server Supports Bind 8.3 or Later

1. Obtain the serial number from the label on the bottom panel of the Net Base.
2. Connect to the network.
3. Power up and wait until the COMM LEDs stop flashing. The COMM LEDs stop flashing when the Net Base has found the DHCP server.
4. On your workstation, open the web browser and enter the Net Base serial number exactly as it appears on the label.
5. Press ENTER and the online configuration utility displays on the workstation.

If Your DNS Server Does Not Support Bind 8.3 or Later

If your DNS server does not support Bind version 8.3 or later, Hyperterminal™ or an equivalent terminal emulator program must be installed on the host workstation to configure the Net Base.

1. Connect the serial cable to the Serial DB-9 Connector on the back of the Net Base and a COM port on the host computer.
2. Start Hyperterminal or an equivalent terminal emulator program. Use these settings: 115200 bps, 8,N,1.
3. Power up and wait until the COMM LEDs have stopped flashing. The COMM LEDs stop flashing when the Net Base has found the DHCP server.

-
4. Enter the user name **<handheld>** and default login password **<handheld>** to log into Net Base configuration utility. The Net Base menu program displays.

SD00032Login: handhel d
Password: *****

- 1) Vi ew System Configurati on
- 2) Vi ew Current Val ues
- 3) Express Setup
- 4) Advanced Setup
- 5) System Stati stics
- 6) System Di agnosti cs
- 7) Hel p
- x) Exi t

Enter choi ce: 2

- 5. Enter choice **2** (View Current Values) to display IP addresses.
- 6. Record the IP address for the Ethernet port.
- 7. Open the web browser on your workstation and enter the IP address for the Net Base you wrote down in Step 6.
- 8. Press ENTER and the online configuration utility displays on your workstation.

Configuring the Net Base with a Static IP Address

1. Connect the serial cable to the Serial DB-9 Connector on the back of the Net Base and a COM port on the host computer. Do NOT connect to the network at this time.
2. On the workstation, start Hyperterminal. Use these settings:
115200 bps, 8,N,1.
3. Wait until login prompt displays on Hyperterminal.
4. Enter the user name <**handheld**> and default login password <**handheld**> to log into network.

```
SD00032Logi n: handhel d  
Password: *****
```

- 1) Vi ew System Confi gurati on
- 2) Vi ew Current Val ues
- 3) Express Setup
- 4) Advanced Setup
- 5) System Stati stics
- 6) System Di agnosti cs
- 7) Hel p
- x) Exi t

Enter choi ce: 3

5. Enter choice **3** (Express Setup) and enter the configuration information requested at each prompt.
6. Press OFF on the power adapter and reconnect the Ethernet cable.
7. Press ON on the power adapter. The Net Base boots up using the configuration information entered in Step 5.

Accessing the Net Base Through a Browser

When the Net Base is powered on, connected to the workstation, and you have obtained its IP address, you can access the Net Base through your internet browser.

1. Open your internet browser.
2. In the **Address** line, type the IP address assigned to the Net Base and press ENTER.
3. The login screen appears showing the Current Values.
4. Enter the **Username** and **Password** and click **Log On**.
5. The home screen appears.

Interface	IP Address
Ethernet	10.17.4.115
Ethernet Netmask	255.255.255.0
Ethernet Broadcast	Unknown
DNS	10.16.1.10
DNS2	10.22.5.235
WINS	10.16.1.10
WINS2	10.22.5.235
Default Gateway	10.17.4.1
USB Port 0 Alias	10.17.4.122
USB Port 1 Alias	10.17.4.124
USB Port 2 Alias	10.17.4.135
USB Port 3 Alias	10.17.4.138
USB Server	192.168.55.250
USB Port 0	192.168.55.200
USB Port 1	192.168.55.201
USB Port 2	192.168.55.202
USB Port 3	192.168.55.203

Link Bar

Link	Click this link to ...
User's Guide	Open the online help files.
Setup	Choose IP address assignments from two options: <ul style="list-style-type: none"> • Obtain all IP addresses dynamically - Requests five IP addresses from a DHCP server: one is used for the Ethernet interface and the remaining four are assigned to each terminal slot. • Specify IP addresses manually - Enables you to specify IP addresses per terminal slot and change the local USB port (PPP) IP address. • Run Spanning Tree Protocol (STP) - Enable or disable STP. STP is enabled by default and helps eliminate redundancy in the network.

Link Bar

Link	Click this link to ...
Current Values	Display the current values; this is the default screen.
Statistics	Display the following system statistics: <ul style="list-style-type: none">• iface - The type of interface• Docked - Charging status• Connect - Status of an active PPP session• RX/TX Total - Total bytes received/transmitted• RX/TX bps - Instantaneous bits per second• RX/TX peak - Peak bits per second
Diagnostics	Choose from available diagnostic options such as pinging the network host.

Mounting Options

The bottom panel offers two mounting options:

1. a DIN Rail for desk mounting or
2. a wall mount kit for wall mounting.

Both the DIN Rail and wall mount kits need to be purchased separately.

Using the DIN Rail

Use a standard 7.5mm high X 35mm wide DIN Rail to mount the Net Base to a horizontal surface, such as a desk or table.


Installation Hardware

Screw: 3/16 in. dia x 5/8 in. long pan head screw


Washer: 1/2 in. OD x 7/32 in. ID x 3/64 in. thick

Nut: 3/16 in. dia

1. Slide the DIN Rail into the slot on the bottom panel.

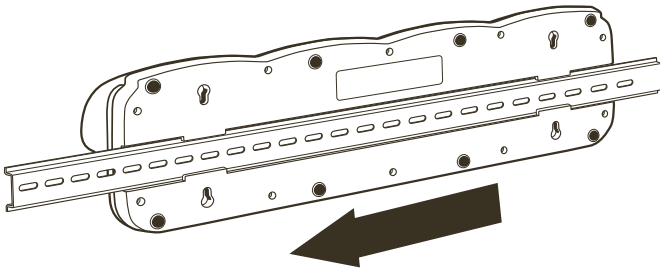

2. Turn the Net Base and DIN Rail right side up.
3. Secure the DIN Rail to the horizontal mounting surface.

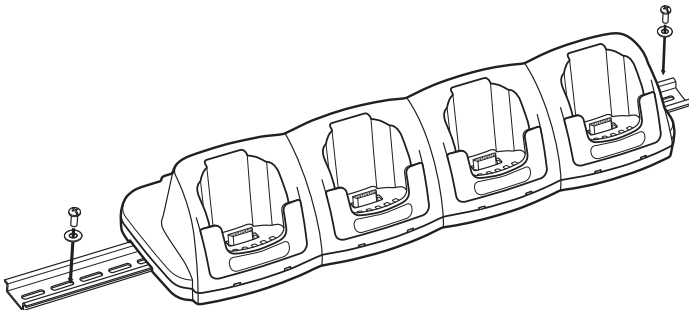

Using the Wall Mount Kit

You need to purchase **two** wall mount kits that each contain:

- a mounting bracket,
- three screws, and
- six washer/nut sets.

You need two kits so that you have two mounting brackets—one for each end of the device—and enough screws (4) and washer/nut sets (8).

The mounting bracket contains an open slot between the back and bottom wedges to accommodate the connector cables.

1. Attach the mounting bracket to the wall using the [Recommended Hardware](#) (see page 1-11).
2. On each end of the Net Base, insert a screw into the round end of each of the four screw slots on the bottom panel. Then, slide each screw towards the narrow end of the slot until it snaps in place.
3. Use a washer/nut set on each of the four screws to secure the screw in the slot.
4. Place the Net Base on the mounting bracket; match the holes up with the secured screws.
5. Use the remaining washer/nut sets on each of the four screws to secure the Net Base to the mounting bracket.

Recommended Hardware

If a metal or wood stud is present, drill a 3/32 in. pilot hole into the stud and use a #6 X 1 1/2 screw and washer to attach the bracket to the wall.

For any of the screws positioned so that they are going directly into dry wall, use a sheet rock anchor/screw set such as the one listed below.

For any of the screws attaching directly into concrete, drill the appropriately sized pilot hole into the concrete and secure the bracket to the wall using concrete anchor screws such as those listed below.

Wall	Recommended Anchors
Sheet Rock	Buildex E-Z Anchor Stud Solver Medium Duty Drywall Anchor (Model #25216); supports 50 lbs., screws included
Concrete	Buildex TAPCON concrete anchors 3/16 in. X at least 1 in.

Technical Assistance

If you need assistance installing or troubleshooting your device, please call your distributor or the nearest technical support office:

North America/Canada

Telephone: (800) 782-4263
Fax number: (315) 554-6705
E-mail: natechsupport@honeywell.com

Latin America

Telephone: (803) 835-8000
Telephone: (800) 782-4263
E-mail: latechsupport@honeywell.com

Brazil

Telephone: +55 (21) 3535-9100
Fax: +55 (21) 3535-9105
E-mail: brsuporte@honeywell.com

Mexico

Telephone: (803) 835-8000
E-mail: latechsupport@honeywell.com

Europe, Middle East, and Africa

Telephone: +31 (0) 40 7999 393
Fax: +31 (0) 40 2425 672
E-mail: eurosupport@honeywell.com

Asia Pacific

Telephone - Hong Kong: +852-3188-3485 or 2511-3050
Telephone - China: +86 21 6361 3818
E-mail: aptechsupport@honeywell.com

Japan

Telephone: +813 5770-6312
E-mail: aptechsupport@honeywell.com

Malaysia

Telephone: +603-6201-7020
E-mail: aptechsupport@honeywell.com

Online Technical Assistance

You can also access technical assistance online at www.honeywell.com/aidc.

Product Service and Repair

Honeywell International Inc. provides service for all its products through service centers throughout the world. To obtain warranty or non-warranty service, contact the appropriate location below to obtain a Return Material Authorization number (RMA #) before returning the product.

North America

Telephone: (800) 782-4263
Fax: (803) 835-8012
E-mail: naservice@honeywell.com

Latin America

Telephone: (803) 835-8000
Telephone: (800) 782-4263
Fax: (239) 263-9689
E-mail: laservice@honeywell.com

Brazil

Telephone: +55 (21) 3535-9100
Fax: +55 (21) 3535-9105
E-mail: brservice@honeywell.com

Mexico

Telephone: +52 (55) 5203-2100
Fax: +52 (55) 5531-3672
E-mail: mxservice@honeywell.com

Europe, Middle East, and Africa

Telephone: +31 (0) 40 2901 633
Fax: +31 (0) 40 2901 631
E-mail: euservice@honeywell.com

Asia Pacific

Telephone: +852-2511-3050
Fax: +852-2511-3557
E-mail: apservice@honeywell.com

Japan

Telephone: +813-5770-6312
Fax: +813-5770-6313
E-mail: apservice@honeywell.com

Online Product Service and Repair Assistance

You can also access product service and repair assistance online at www.honeywell.com/aidc.

Limited Warranty

Honeywell International Inc. ("HII") warrants its products to be free from defects in materials and workmanship and to conform to HII's published specifications applicable to the products purchased at the time of shipment. This warranty does not cover any HII product which is (i) improperly installed or used; (ii) damaged by accident or negligence, including failure to follow the proper maintenance, service, and cleaning schedule; or (iii) damaged as a result of (A) modification or alteration by the purchaser or other party, (B) excessive voltage or current supplied to or drawn from the interface connections, (C) static electricity or electro-static discharge, (D) operation under conditions beyond the specified operating parameters, or (E) repair or service of the product by anyone other than HII or its authorized representatives.

This warranty shall extend from the time of shipment for the duration published by HII for the product at the time of purchase ("Warranty Period"). Any defective product must be returned (at purchaser's expense) during the Warranty Period to HII's factory or authorized service center for inspection. No product will be accepted by HII without a Return Materials Authorization, which may be obtained by contacting HII. In the event that the product is returned to HII or its authorized service center within the Warranty Period and HII determines to its satisfaction that the product is defective due to defects in materials or workmanship, HII, at its sole option, will either repair or replace the product without charge, except for return shipping to HII.

EXCEPT AS MAY BE OTHERWISE PROVIDED BY APPLICABLE LAW, THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER COVENANTS OR WARRANTIES, EITHER EXPRESSED OR IMPLIED, ORAL OR WRITTEN, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

HII'S RESPONSIBILITY AND PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT WITH NEW OR REFURBISHED PARTS. IN NO EVENT SHALL HII BE LIABLE FOR INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, AND, IN NO EVENT, SHALL ANY LIABILITY OF HII ARISING IN CONNECTION WITH ANY PRODUCT SOLD HEREUNDER (WHETHER SUCH LIABILITY ARISES FROM A CLAIM BASED ON CONTRACT, WARRANTY, TORT, OR OTHERWISE) EXCEED THE ACTUAL AMOUNT PAID TO HII FOR THE PRODUCT. THESE LIMITATIONS ON LIABILITY SHALL REMAIN IN FULL FORCE AND EFFECT EVEN WHEN HII MAY HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH INJURIES, LOSSES, OR DAMAGES. SOME STATES, PROVINCES, OR COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

All provisions of this Limited Warranty are separate and severable, which means that if any provision is held invalid and unenforceable, such determination shall not affect the validity of enforceability of the other provisions hereof.

Use of any peripherals not provided by the manufacturer may result in damage not covered by the warranty. This includes but is not limited to: cables, power supplies, cradles, and docking stations.

Honeywell International Inc. extends these warranties only to users of the products. These warranties are non-transferable.

The duration of the limited warranty for the Dolphin Net Base is one year.

How to Extend Your Warranty

Honeywell International Inc. offers a variety of service plans on our hardware products. These agreements offer continued coverage for your equipment after the initial warranty expires. For more information, contact your Sales Representative, Customer Account Representative, or Product Service Marketing Manager from Honeywell International Inc., or your Authorized Reseller.



Disclaimer

Honeywell International Inc. (“HII”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII.

HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

©2005–2008 Honeywell International Inc. All rights reserved.

Web Address: www.honeywell.com/aidc

Trademarks

Dolphin, Dolphin RF, HomeBase, Mobile Base, and QuadCharger are trademarks or registered trademarks of Hand Held Products, Inc. or Honeywell International Inc.

Microsoft, Windows, Windows Mobile, Windows CE, Windows NT, Windows 2000, Windows ME, Windows XP, ActiveSync, Outlook, and the Windows logo are trademarks or registered trademarks of Microsoft Corporation.

Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are the property of their respective owners.

Hand Held Products/Dolphin/Metrologics products have no affiliation with Honeywell branded batteries/chargers, which are exclusively distributed by Global Technology Systems pursuant to a license agreement.

Patents

Please refer to the product packaging for a list of patents.

Honeywell International Inc.
700 Visions Drive
P.O. Box 208
Skaneateles Falls, NY 13153-0208



NETBASEALL-QS
Rev B
10/30/08